


# A Cleaning resistance tracks

抵抗面の掃除



1

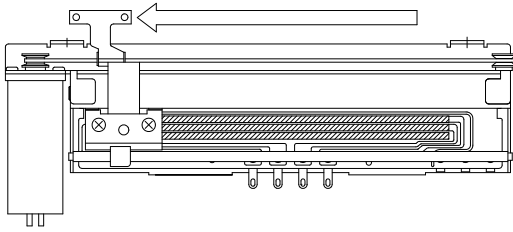

Slide the control lever to either end.

レバーを端に動かす


2

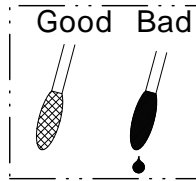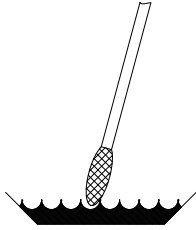

Soak a cotton swab with absolute ethanol without dripping.

綿棒に無水エタノールを染み込ませる  
(垂れるほどに染み込ませ過ぎない事)


3

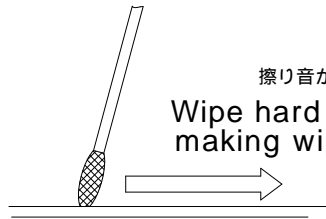


擦り音が出るくらい強く拭く  
Wipe hard as much as  
making wiping sound.

The wiping direction is from the carrier side to the track ends, just one-way, one time per track.

可動子から端に向けて(往復はさせない)各トラック1回ずつ拭く

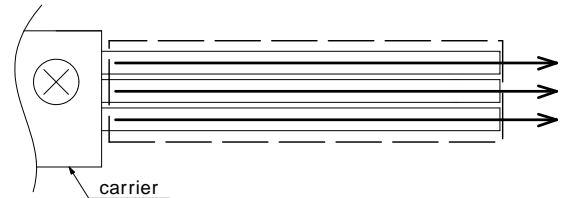


4

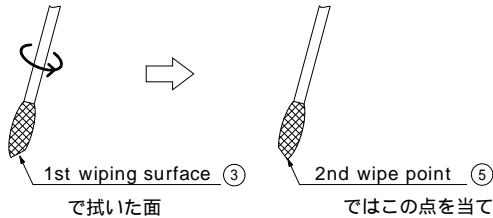

Rotate 180 degrees the cotton swab to use the clean side on next step

綿棒を180度回転させ、綺麗な面を下に向ける

5

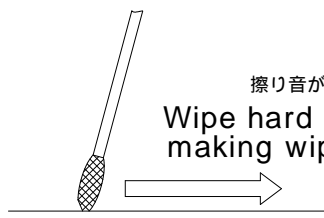


擦り音が出るくらい強く拭く  
Wipe hard as much as  
making wiping sound.

Do the same procedure as ③

with the clean side of the cotton swab.

No need to soak it with the ethanol on this step.

と同じ作業を行う(追加でエタノールは不要)

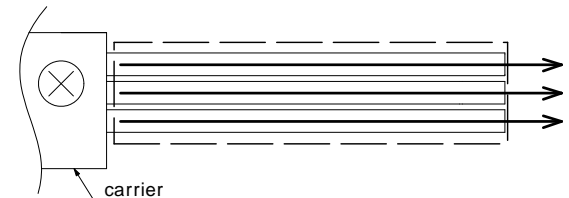


6

Do not slide the control lever until the ethanol on the surface has dried.

抵抗面のエタノールが乾くまでレバーを動かさない

7

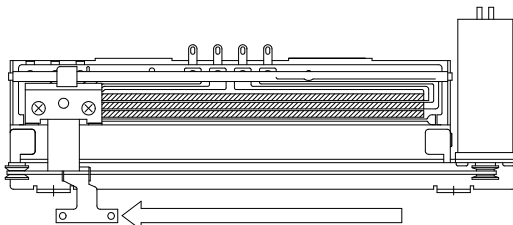

Turn upside down the fader to ease doing next steps, then slide the control lever to the other end.

作業しやすいように上下逆さまにし、  
レバーを反対端に動かす

Do the same steps from ② to ⑥ with  
a new cotton swab.

からの作業を行う